

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



GUARANTEE
Non-human damage
12-month warranty

BASIC INFORMATION

Manual

- **Size:** 335.8(L)×155.5(W)×41.5(H)±2
- **Layout:** 82keys

Switch Puller

Keyboard

- **Backlight:** RGB
- **Switch:** Mechanical switch

Type-C Cable

- **Edition:** USB/2.4G/BT

Receiver

INDICATOR LIGHT

100% IN WIRELESS MODE BATTERY LEVEL

En modo inalámbrico: Nivel de batería
En mode sans fil: Niveau de batterie

○ **Caps Lock**

A Caps Lock
Bloq Mayús

○ **Win Lock**

Win Lock
Bloq Win

○ **ScrLk Lock**

↓ ScrLk Lock
Bloq Mayús

○ **Low-voltage Indication**

⚡ Indicateur Tension Faible
Indicación de baja tensión

WIRED MODE

1

Toggle switch to OFF for Wired Mode.
Basculez le commutateur sur OFF pour passer en mode câblé
Interruptor de palanca a la posición de APAGADO

2

Fully charge keyboard before first use.
Rechargez complètement le clavier avant sa première utilisation
Cargue completamente el teclado antes de utilizarlo por primera vez

2.4GHZ MODE

1

Turn the toggle switch to the 2.4G position
Basculez l'interrupteur en position 2.4G
Commutador a la posición 2.4G

2

BT MODE

Toggle switch to BT for BT Mode.
Commutateur BT pour le mode Bluetooth
Commutador en posición BT

Short press Fn+Q/W/E to change BT channel.
Appuis Bref sur Fn+Q/W/E pour changer de canal Bluetooth
Pulsación corta Fn+Q/W/E para canal Bluetooth.

Long press Fn+Q/W/E entry pairing mode.
Appuis long sur Fn+Q/W/E pour entrer dans le mode d'appairage
Pulsación larga Fn+Q/W/E al modo de emparejamiento

THE SECOND COMBINATION OF FUNCTION KEYS

Fn + A

Switch to windows system
Basculer en mode système windows
Cambiar a Windows

Fn + S

Switch to mac system
Basculer en mode système mac
Cambiar a sistema mac

Fn + Home

Pause
Pause
Pausa

Fn + F7

Last song
Musique Précédente
Canción anterior

Fn + F8

Play / pause
Lecture / Pause
Reproducir/pausar

Fn + F9

Next song
Musique Suivante
Canción siguiente

Fn + F10

Mute
SourGINE
Silenciar

Fn + F11

Volume-
Diminuer le Volume
Volumen-

Fn + F12

Volume+
Augmenter le Volume
Volumen+

Fn + End

Insert
Insérer
Insertar

Fn + Del

ScrLK
ScrLK
ScrLK

Fn + PgUp

PrtSc
PrtSc (Impression D'écran)
PrtSc

BACKLIGHT CONTROL

Fn + |

Switch Backlight Mode
Changement du mode de rétro-éclairage
Cambiar el modo de retroiluminación

Fn + ↓

Backlight Brightness-
Diminution de la Luminosité du rétroéclairage-
Brillo de la retroiluminación-

Fn + , <

Switch the backlight color
Changer la couleur du rétroéclairage
Cambiar el color de la retroiluminación

Fn + ↑

Backlight Brightness+
Augmentation de la Luminosité du rétroéclairage+
Brillo de la retroiluminación+

Fn + ←

Backlight Speed-
Diminution de la Vitesse du rétroéclairage-
Velocidad de retroiluminación-

Fn + Win

Window Lock
Verrouillage Win
Bloquear tecla WIN

Fn + →

Backlight Speed+
Augmentation de la Vitesse du rétroéclairage+
Velocidad de retroiluminación+

Fn + Space

Restore to factory settings
Rétablir les paramètres d'usine
Restaurar valores de fábrica

CUSTOMIZED BACKLIGHT

Fn + 2@ / 3#

Non-customizable
Non personnalisable
No personalizable

Fn + 1!

↓

Fn + ←Back

↓

e.g.

W + A + S + D

Repeat key presses can change backlit colors
La pression répétée sur les touches peut modifier les couleurs du rétroéclairage
Las pulsaciones repetidas de las teclas cambian el color de la retroiluminación.

↓

Fn + ←Back

MULTIMEDIA KEY FOR WINDOWS

Fn + F1

Computer
Ordinateur
Ordenador

Fn + F2

Browser
Navigateur
Navegador

Fn + F3

Mailbox
E-Mail
Buzón

Fn + F4

Calculator
Calculatrice
Calculadora

Fn + F5

Player
Lecture
Reproductor

Fn + F6

Stop
Arrêt
Detener

MULTIMEDIA KEY FOR MAC

Fn + F1

Screen Brightness-
Diminution de la Luminosité de l'écran-
Brillo de la pantalla-

Fn + F2

Screen Brightness+
Augmentation de La Luminosité de l'écran+
Brillo de la pantalla+

Fn + F5

Keyboard Backlight Brightness-
Diminution de la Luminosité du rétroéclairage du clavier -
Brillo de la retroiluminación del teclado -

Fn + F6

Keyboard Backlight Brightness+
Augmentation de la Luminosité du Rétroéclairage du clavier +
Brillo de la retroiluminación del teclado +

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
● Reorient or relocate the receiving antenna.
● Increase the separation between the equipment and receiver.
● Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
● Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



GUARANTEE
Non-human damage
12-month warranty

BASIC INFORMATION

 


Manual

- Size: 335.8(L)×155.5(W)×41.5(H)±2
- Layout: 82keys




Switch Puller



Keyboard

 - Backlight: RGB
- Switch: Mechanical switch



Type-C Cable

- Edition: USB/2.4G/BT



Receiver

INDICATOR LIGHT



无线模式下
电池电量

Im drahtlosen Modus: Batteriestand
In modalità wireless: livello della batteria

○ Caps Lock

A Feststelltaste
Caps Lock

○ Win Lock

🔒 Win-Sperre
Win Lock

 
○ ScrLk Lock

↓ ScrLk-Sperre
ScrLk Lock

○ 低电压指示

⚡ Anzeige der niedrigen Spannung
Indicazione di bassa tensione


WIRED MODE

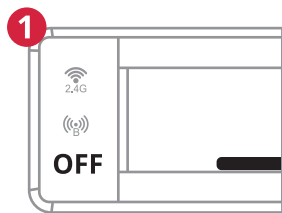

拨动开关到OFF位置

Kippschalter auf die Position OFF

 Portare l'interruttore in posizione OFF

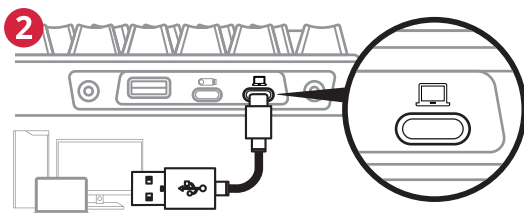


首次使用前请为键盘充满电

Bitte laden Sie die Tastatur vor dem ersten Gebrauch

vollständig auf

Caricare completamente la tastiera prima del primo utilizzo

 2.4GHZ MODE

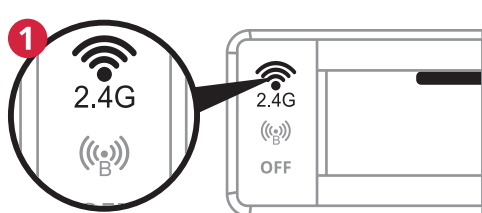


拨动开关到2.4G位置

Kippschalter auf die Position 2.4G

Commutare l'interruttore in posizione 2.4G



 
BT MODE

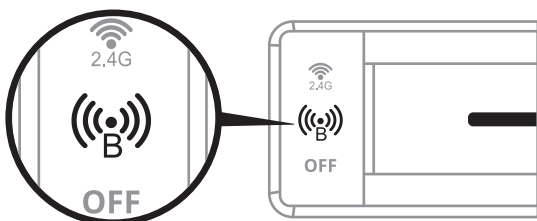

拨动开关到BT位置

Kippschalter auf die Position BT

 Commuta l'interruttore sulla posizione BT




短按Fn+Q/W/E至蓝牙频道

Kurzes Drücken von Fn+Q/W/E zum

Bluetooth-Kanal

Premere brevemente Fn+Q/W/E per passare al

 canale Bluetooth



长按Fn+Q/W/E进入配对模式

 
Langes Drücken von Fn+Q/W/E zum

Pairing-Modus

Premere a lungo Fn+Q/W/E per passare alla

modalità di accoppiamento


THE SECOND COMBINATION OF FUNCTION KEYS



切换到windows系统

Schalter Im Windows-System

 
Passa a Windows



切换到mac系统

Schalter Im MAC-System

 
Passare al sistema Mac



停止

Pause

 
Pause



上一曲

Letzter Song

 
Canzone precedente



播放 / 暂停

Wiedergabe/Pause

 Riproduzione/pausa



下一曲

Nächster Song

Canzone successiva



静音

Stummschaltung

Silenzioso



音量-

Lautstärke Verringern

Volume-



音量+

Lautstärke Erhöhen

Volume+



Insert

Einfügen

Inserire



ScrLk

ScrLk

ScrLk



PrtSc

PrtSc

PrtSc

BACKLIGHT CONTROL



切换背光模式

Umschalten des Hintergrundbeleuchtungs modus

Commutazione della modalità di retroilluminazione



背光亮度-

Helligkeit der Hintergrundbeleuchtung-

Luminosità della retroilluminazione-



(only for RGB version)

切换背光颜色

Farbe der Hintergrundbeleuchtung wechseln

Cambiare il colore della retroilluminazione



背光速度-

Geschwindigkeit der Hintergrundbeleuchtung-

Velocità retroilluminazione-



背光亮度+

Helligkeit der Hintergrundbeleuchtung+

Luminosità della retroilluminazione+



锁定WIN键

WIN-Taste sperren

Blocco del tasto WIN



背光速度+

Geschwindigkeit der Hintergrundbeleuchtung+

Velocità retroilluminazione+



恢复出厂设置

Werkseinstellungen wiederherstellen

Ripristino delle impostazioni di fabbrica

CUSTOMIZED BACKLIGHT



不可自定义

Nicht anpassbar

Non personalizzabile



 
e.g.




重复按键可以改变背光颜色

Durch wiederholtes Drücken der Taste ändert sich die Farbe der Hintergrundbeleuchtung.

La pressione ripetuta dei tasti cambia il colore della retroilluminazione.



MULTIMEDIA KEY FOR WINDOWS

 

计算机

Computer

 
Computer



浏览器

Browser


Browser



邮箱

Mailbox

 
Cassetta postale



计算器

Taschenrechner

 
Calcolatrice



播放器

Spieler

 Lettore




停止

Anhalten

Arresto

 MULTIMEDIA KEY FOR MAC



屏幕亮度-

Bildschirmhelligkeit-

 
Luminosità dello schermo-



屏幕亮度+

Bildschirmhelligkeit+

Luminosità dello schermo+



键盘背光亮度-

Helligkeit der Hintergrundbeleuchtung der Tastatur -

Luminosità della retroilluminazione della tastiera -



键盘背光亮度+

Helligkeit der Hintergrundbeleuchtung der Tastatur +

Luminosità della retroilluminazione della tastiera +