

**FCC WARNING:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

**WHEN USING A KEYBOARD:**

1.Maintain proper posture and avoid excessive force on the keys.  
2.Take regular breaks to prevent hand fatigue.  
3.Clean the keyboard regularly to remove dust and dirt.  
4.Avoid exposing the keyboard to liquids.  
5.Keep the keyboard in a suitable environment, free from extreme temperatures or humidity.  
Remember these tips for a comfortable and durable keyboard experience.

**WARRANTY**

**12 MONTHS**

**WARRANTY**

**GUARANTEE**

Non-human damage  
12-month warranty

产品基础 PRODUCT BASIC INFORMATION					指示灯 INDICATOR LIGHT	
					<div><div><div>K68Pro</div><div>Caps Lock</div><div>Win Lock</div><div>充电指示:充电时呼吸状态、充满常亮、低电压闪烁</div><div>Charging indicator: Breath mode during charging, steady light when fully charged, and low voltage blinking.</div></div><div><div>K20</div><div>Num</div><div>充电指示:充电时常亮、充满熄灭低电压时闪烁</div><div>Charging indicator: Solid light during charging, off when fully charged, and flashing when battery is low</div></div></div>	
说明书 Manual	接轴拔键器 Switch and Keycaps Puller	键盘 Keyboard	Type-C 数据线 Type-C Cable	2.4G接收器 2.4G Receiver		
尺寸/Size		Layout	版本/Version		背光/Backlit	轴体/Key Switches
K68PRO	329.4(L)×118.15(W)×37.9(H)±2	67 keys	有线/2.4G/BT USB-C wired/2.4G wireless/BT		RGB	机械轴体 Mechanical switches
K20	89.7(L)×132.5(W)×38.3(H)±2	19 keys				

**有线模式**  
WIRED MODE

**K68Pro**

1 连接USB至设备，旋钮拨到OFF为有线模式  
Connect the USB to the device and turn the knob to "OFF" for wired mode.  
(Note: Wired mode can only be used when the knob in the upper right corner is turned to "OFF".)

2 连接USB至设备，USB Type-c 接口

(建议: 使用5V 1A额定电源为键盘充电)  
(Recommended: Use a 5V 1A power supply for keyboard charging).

**K20**

1 有线模式：连接USB至设备，开关拨到中间为有线模式  
Connect the USB cable to the device and set the switch to the middle position for wired mode.

**BT连接**  
BT CONNECTION

**K68Pro**

1 拨动开关到BT1、BT2、BT3位置  
Toggle switch to BT1、BT2、BT3 for BT Mode.

2 长按Fn+Q/W/E进入配对模式  
Press and hold Fn+Q/W/E to pair with new BT devices

**K20**

1 开关拨到B状态  
Setting the switch to the "B" position

2 短按Fn+1/2/3至BT频道  
Short press Fn+1/2/3 to BT channel

长按Fn+1/2/3进入配对模式  
Long press Fn+1/2/3 to enter pairing mode

**2.4G连接**  
2.4G RECEIVER CONNECTION

**K68Pro**

1 旋钮开关拨到2.4G位置。  
2. FN+P长按对码，P键闪烁插入接收器，P键停止闪烁即对码成功。  
1.Switch to the 2.4G position,  
2.Press and hold FN+P to pair,  
As the P key flashing, plug the receiver into the device.  
if the P key stops flashing, pairing is successful.

**K20**

1 开关拨到G状态。  
2. FN+0长按对码，0键快闪烁插入接收器，0键停止闪烁即对码成功。  
1. Switch to the "G" position.To pair the receiver,  
2. long-press FN + 0. The 0 key will flash. Insert the receiver and wait for the flashing to stop, indicating successful pairing.

**背光控制**  
BACKLIGHT CONTROL

**K68Pro**

Fn + [Backslash] 支持多种背光效果切换  
Multiple backlight effects switch

Fn + [Left Arrow] 背光单色切换  
Backlight monochrome switching

Fn + [Up Arrow] 背光亮度+  
Backlight brightness +

Fn + [Down Arrow] 背光亮度-  
Backlight brightness -

Fn + [Win] 窗口锁定  
Windows lock

Fn + [Space Bar] 长按3秒，恢复出厂设置  
Long-press for three seconds to restore factory settings

**K20**



Fn + [Divide] 多种动态背光模式切换  
Switch between multiple dynamic backlight modes

Fn + [Multiply] 背光颜色切换  
Switch backlight colors

Fn + [Plus] 背光亮度增加  
Backlight brightness +

Fn + [Minus] 背光亮度减小  
Backlight brightness -

Fn + [Left Arrow] 长按3秒，恢复出厂设置  
Long-press for three seconds to restore factory settings

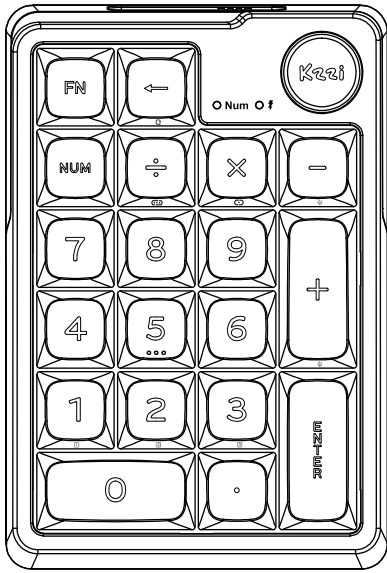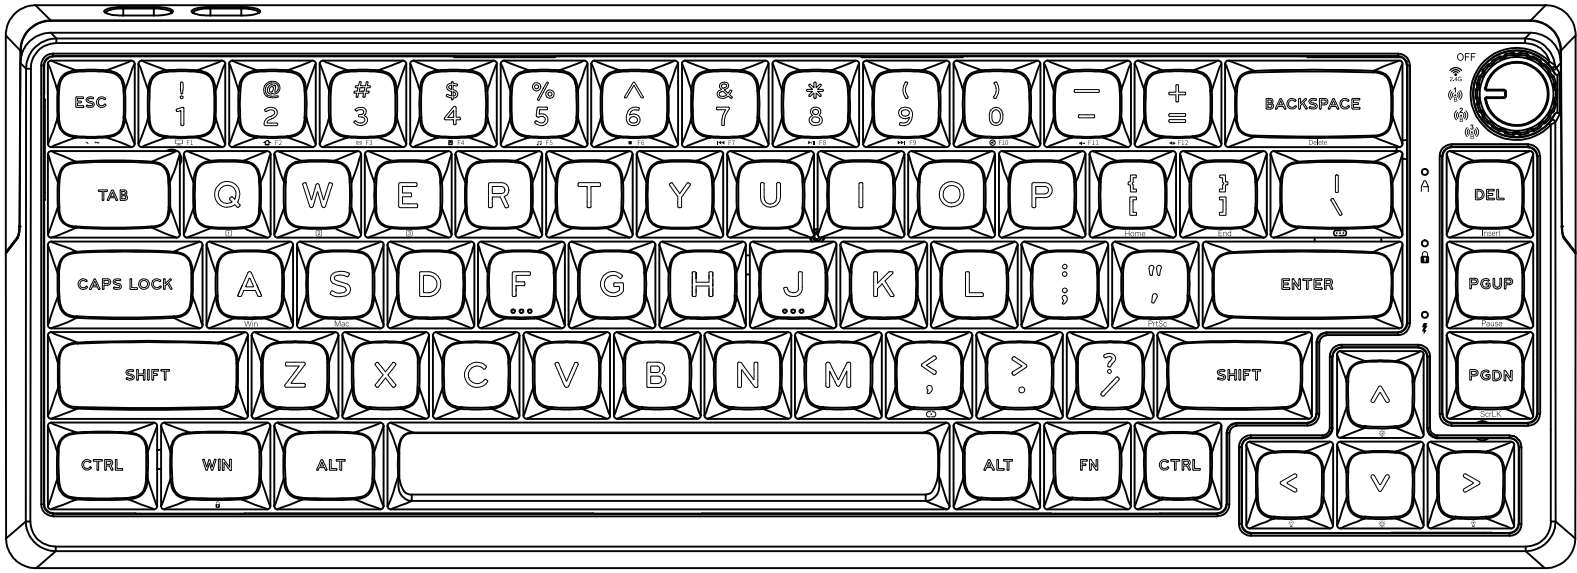

**ISED STATEMENT:**

English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device must not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

French: Cet appareil contient des émetteur(s)/récepteur(s) exempt(s) de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement économique Canada.

L'exploitation est soumise aux deux conditions suivantes :

(1) Cet appareil ne doit pas provoquer d'interférences.

(2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

**BATTERIES:**

A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the light.

1) Replacement of a battery with an incorrect type that can defeat a safeguard;

2) Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;

3) Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;

4) A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

**WARRANTY**

**12 MONTHS WARRANTY**

**GUARANTEE**

**Non-human damage 12-month warranty**

FN组合功能键 K68Pro

**FN KEY**

Fn + ESC	~	Fn + PrtSc	
Fn + End		Fn + Insert	
Fn + PGUP	Pause	Fn + PGDN	ScrLK
Fn + Home			

特殊功能键 K68Pro  
SPECIAL FUNCTION KEYS

Fn + 1	F1	Fn + 5	F5	Fn + 9	F9
Fn + 2	F2	Fn + 6	F6	Fn + 0	F10
Fn + 3	F3	Fn + 7	F7	Fn + -	F11
Fn + 4	F4	Fn + 8	F8	Fn + =+	F12

电池电量提示  
KEYBOARD BATTERY LEVEL INDICATION AND CHECK

**K68Pro**

键盘背光可显示当前电池电量状态  
The keyboard's lighting can display the current battery level status.

按FN+ENTER 查看电池电量情况  
Pressing FN+ENTER allows you to view the battery level status.Each key from "1" to "0" represents a specific battery level range.

比如:  
For example:

11 背光亮 表示此时键盘10%的电量  
The backlight of the "1" key is illuminated, indicating that the keyboard's current battery level is at 10%.

11 ~ 00 背光同时亮, 表示此时键盘20%的电量  
The "1" and "2" keys are both illuminated, indicating that the keyboard's current battery level is at 20%.

以此类推  
Similarly

11 ~ 00 背光同时亮, 表示此时键盘电量 100%  
When both the "1" and "0" keys are illuminated, it signifies that the keyboard's battery level is at 100%.

**K20**

长按旋钮三秒切换旋钮三种模式  
Long-press the knob for three seconds to switch between three modes.

1. 音量模式 (默认): 顺时针音量 +, 逆时针音量 -, 按压静音 (旋转时旋钮亮红色)  
1.Volume mode (default): Rotating the knob clockwise increases the volume, rotating it counterclockwise decreases the volume, and pressing the knob mutes the sound ( the knob lights up red while rotating ).

2. 背光模式: 顺时针背光亮 +, 逆时针背光亮 -, 按压切换灯效 (旋转时旋钮亮绿色)  
2.Backlight mode: Clockwise rotation increases brightness, counterclockwise rotation decreases brightness, and pressing the knob toggles between lighting effects ( knob lights up green while rotating ).

3. 鼠标滚轮模式: 顺时针向下翻页, 逆时针向上翻页 ( 旋转时旋钮亮蓝色 )  
3.Mouse scroll wheel mode: Rotating the knob clockwise scrolls down, rotating it counterclockwise scrolls up ( the knob lights up blue while rotating ).

WINDOWS多媒体键 K68Pro  
WINDOWS MULTIMEDIA KEYS

Windows系统 (FN+A: 切换到Windows系统)  
In Windows mode (FN+A: Switch to Windows system, FN+S: Switch to macOS system)

FN + 左 Ctrl (主键功能和复合键的第二功能互换)  
(FN + Left Ctrl: Swap primary key function and secondary function of compound keys.)

Fn + F1	我的电脑 Computer	Fn + F4	计算器 Calculator	Fn + F7	上一曲 Previous Song	Fn + F10	静音 Mute
Fn + F2	浏览器 Browser	Fn + F5	播放器 Media Player	Fn + F8	播放/暂停 Play/Pause	Fn + F11	音量- Volume -
Fn + F3	邮箱 Email	Fn + F6	停止 Stop	Fn + F9	下一曲 Next Song	Fn + F12	音量- Volume +

MAC多媒体键 K68Pro  
MAC MULTIMEDIA KEYS

MAC系统 (FN+s: 切换到MAC系统)  
In macOS mode (FN+S: Switch to macOS system; FN+A: Switch to Windows system)

(FN + 左 Ctrl (主键功能和复合键的第二功能互换)  
(FN + Left Ctrl: Swap primary key function and secondary function of compound keys)

Fn + F1	屏幕亮度 - Screen Brightness -	Fn + F6	键盘背光亮 + Keyboard Backlight Brightness +	Fn + F9	下一曲 Next Song	Fn + F12	音量- Volume +
Fn + F2	屏幕亮度 + Screen Brightness +	Fn + F7	上一曲 Previous Song	Fn + F10	静音 Mute		
Fn + F5	键盘背光亮 - Keyboard Backlight Brightness -	Fn + F8	播放/暂停 Play/Pause	Fn + F11	音量- Volume -		

Thank you for choosing KZZI products! If you have any questions or need assistance, please feel free to contact us. Our team is dedicated to providing support and addressing your inquiries.

We highly value your feedback and suggestions as they help us continuously improve and enhance product quality. Once again, we appreciate your support for KZZI!