

KZZI

K75Lite MECHANICAL KEYBOARD



FCC WARNING
This equipment may cause interference with other radio frequency equipment.
WARRANTY 12 MONTHS
GUARANTEE Non-human damage 12-month warranty

BASIC INFORMATION

Manual, Switch Puller, Keyboard, Type-C Cable, Receiver. Size: 335.8(L)x155.5(W)x41.5(H)±2. Layout: 82keys. Backlight: RGB. Switch: Mechanical switch. Edition: USB/2.4G/BT.

INDICATOR LIGHT

Caps Lock, Scrk Lock, Win Lock. Low voltage indication: Red light flashing. Charging indicator: Always on during charging, off when fully charged.

WIRED MODE

Toggle switch to OFF for Wired Mode. Fully charge keyboard before first use. Diagrams showing the switch being moved to the OFF position.

2.4GHZ MODE


Turn the toggle switch to the 2.4G position. Diagrams showing the switch being moved to the 2.4G position.

BT MODE

Toggle switch to BT for BT Mode. Diagrams showing the switch being moved to the BT position.

Short press Fn+Q/W/E to change BT channel. Long press Fn+Q/W/E entry pairing mode. BT Device 1, 2, 3.

BATTERY REMINDER

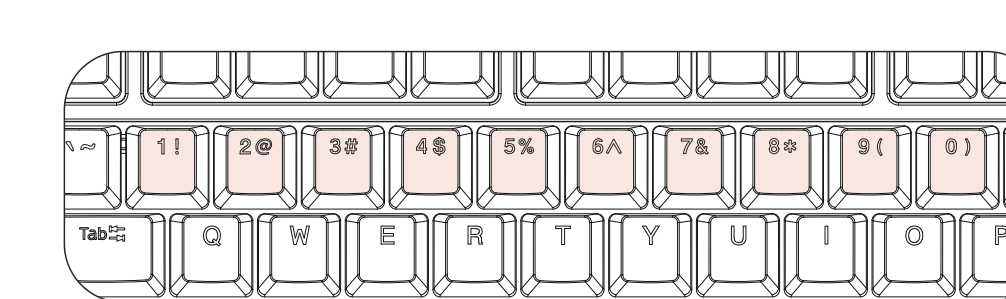

In BT 2.4G mode, Press and hold FN+ENTER to view the battery level indicator. In mode BT, 2.4G, Appuyez sur FN+ENTER pour afficher le niveau de la batterie.

For Example:

Diagrams showing the backlit key '1!' indicating 10% power, '1!' and '2@' indicating 20% power, and '1!' and '0)' indicating 100% power.

THE SECOND COMBINATION OF FUNCTION KEYS

Fn + A: Switch to windows system. Fn + S: Switch to mac system. Fn + Home: Pause. Fn + F7: Last song. Fn + F8: Play / pause. Fn + F9: Next song. Fn + F10: Mute. Fn + F11: Volume-. Fn + F12: Volume+. Fn + End: Insert. Fn + Del: ScrLK. Fn + PgUp: PrtSc.

BACKLIGHT CONTROL

Fn + V: Switch Backlight Mode. Fn + Down Arrow: Backlight Brightness-. Fn + F7: Last song. Fn + F8: Play / pause. Fn + F9: Next song. Fn + F10: Mute. Fn + F11: Volume-. Fn + F12: Volume+. Fn + End: Insert. Fn + Del: ScrLK. Fn + PgUp: PrtSc.

CUSTOMIZED BACKLIGHT

Fn + 2@ / 3# for non-customizable backlight. Diagrams showing key combinations for screen and keyboard backlight brightness control.

MULTIMEDIA KEY FOR WINDOWS

Fn + F1: Computer. Fn + F2: Browser. Fn + F3: Mailbox. Fn + F4: Calculator. Fn + F5: Player. Fn + F6: Stop.

MULTIMEDIA KEY FOR MAC

Fn + F1: Screen Brightness-. Fn + F2: Screen Brightness+. Fn + F5: Keyboard Backlight Brightness-. Fn + F6: Keyboard Backlight Brightness+.

A面

KZZI

K75Lite MECHANICAL KEYBOARD



ISED STATEMENT
This product is a Class II digital device. It may cause interference with other radio frequency equipment.
WARRANTY 12 MONTHS
GUARANTEE Non-human damage 12-month warranty

BASIC INFORMATION

Manual, Switch Puller, Keyboard, Type-C Cable, Receiver. Size: 335.8(L)x155.5(W)x41.5(H)±2. Layout: 82keys. Backlight: RGB. Switch: Mechanical switch. Edition: USB/2.4G/BT.

INDICATOR LIGHT

Caps Lock, Scrk Lock, Win Lock. Low voltage indication: Red light flashing. Charging indicator: Always on during charging, off when fully charged.

WIRED MODE

Toggle switch to OFF for Wired Mode. Fully charge keyboard before first use. Diagrams showing the switch being moved to the OFF position.

2.4GHZ MODE


Turn the toggle switch to the 2.4G position. Diagrams showing the switch being moved to the 2.4G position.

BT MODE

Toggle switch to BT for BT Mode. Diagrams showing the switch being moved to the BT position.

Short press Fn+Q/W/E to change BT channel. Long press Fn+Q/W/E entry pairing mode. BT Device 1, 2, 3.

BATTERY REMINDER

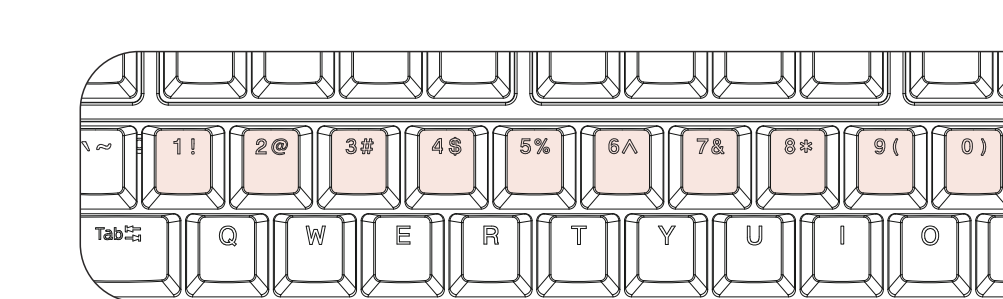

In BT, 2.4G mode, Press and hold FN+ENTER to view the battery level indicator. In mode BT, 2.4G, Drücken Sie FN+ENTER, um den Akkustand zu überprüfen.

For Example:

Diagrams showing the backlit key '1!' indicating 10% power, '1!' and '2@' indicating 20% power, and '1!' and '0)' indicating 100% power.

THE SECOND COMBINATION OF FUNCTION KEYS

Fn + A: Switch to windows system. Fn + S: Switch to mac system. Fn + Home: Pause. Fn + F7: Last song. Fn + F8: Play / pause. Fn + F9: Next song. Fn + F10: Mute. Fn + F11: Volume-. Fn + F12: Volume+. Fn + End: Insert. Fn + Del: ScrLK. Fn + PgUp: PrtSc.

BACKLIGHT CONTROL

Fn + V: Switch Backlight Mode. Fn + Down Arrow: Backlight Brightness-. Fn + F7: Last song. Fn + F8: Play / pause. Fn + F9: Next song. Fn + F10: Mute. Fn + F11: Volume-. Fn + F12: Volume+. Fn + End: Insert. Fn + Del: ScrLK. Fn + PgUp: PrtSc.

CUSTOMIZED BACKLIGHT

Fn + 2@ / 3# for non-customizable backlight. Diagrams showing key combinations for screen and keyboard backlight brightness control.

MULTIMEDIA KEY FOR WINDOWS

Fn + F1: Computer. Fn + F2: Browser. Fn + F3: Mailbox. Fn + F4: Calculator. Fn + F5: Player. Fn + F6: Stop.

MULTIMEDIA KEY FOR MAC

Fn + F1: Screen Brightness-. Fn + F2: Screen Brightness+. Fn + F5: Keyboard Backlight Brightness-. Fn + F6: Keyboard Backlight Brightness+.

B面